

Seaward QuickCheck Verification Card

The Seaward QuickCheck verification card can be used to confirm the calibration tolerance of any instrument with point to point probe measurement. It has 4 preset values each for Continuity (0.2, 0.5, 1 & 10 Ω) and Insulation (0.5, 1, 2 & 10 M Ω) which are comparable to values experienced during testing.

To check your unit simply clip the black lead to the common and then use the red lead probe to make contact with each value whilst running the relevant test. You can note down these values on a log sheet like the one provided below.

The 'Table of Tolerances' on the back of the QuickCheck allows you to ensure that your tester is still within specification to +/- 2% or +/- 5% without having to calculate what the values should be reading between.



