

# How to Setup a Printer to work with the Apollo Series

The following document is intended to be a troubleshooting guide to ensure you are setting up and connecting your Seaward printer to the Apollo **Series** instruments. Please check all aspects of this before contacting the technical support helpline.

## Pairing with the Apollo Series Instruments

- 1) Please register your Apollo to receive an additional 12 months warranty plus full access to Product Support. You can do this at [www.seaward.co.uk/warranty24](http://www.seaward.co.uk/warranty24) or by completing the form in the "Care and Support" card and returning by post.
  - 2) Please ensure your Apollo has the latest firmware installed, to do this please see the following link: [www.seaward.co.uk/apollo-series-firmware](http://www.seaward.co.uk/apollo-series-firmware)
  - 3) Make sure your Bluetooth Seaward printer is switched on.
  - 4) From the Apollo "Home Screen"  press the Menu button "F4" .
  - 5) In the menu select Bluetooth by pressing key number "3" .
  - 6) The 'Bluetooth active' symbol will appear next to the battery symbol. .
  - 7) On the Apollo press the Bluetooth search button "F2"  (hint: it helps if the printer is the only Bluetooth device turned on at this time)
  - 8) Select the "Printer:" field on the Apollo (using the arrow keys) and from the drop down select your printer. For example "Elite . . . ." (Test n Tag Elite), "Pro . . . ." (Test n Tag Pro) or "T'n'T . . . ." (Test n Tag)
  - 9) Press "F4"  to save the new Bluetooth configuration
  - 10) You will now need to setup the printer in the Apollo **Series** and confirm the label sizes and / or company logos. To do this select "View Data", by selecting number "1" 
- Note:**  
You will require test data to be already stored on the instrument to do this.
- 11) Select an asset using the arrow keys and function key "F4" .
  - 12) Select a full test result using "F4" again to display the "Test Details" for the asset.
  - 13) Select menu/options, function key "F4", to display the "Test Results Option" .
  - 14) Highlight and select "Print Label" using the arrow keys and function key "F4" , a virtual image of the current label is shown on the instrument.

## Application Note 0069

- 15) To setup the printer that was paired in the earlier steps use the tools function key “F2”. 
- 16) Using the arrow keys to highlight the bottom line “Printer” and, from the dropdown, select the Bluetooth printer paired earlier.
- Note:**  
*This will add / remove fields depending upon the selection made*
- 17) Returning to the top field, and again using the arrow keys, the “Title” can be altered, which is used in some label formats.
- 18) Depending on the printer type, the “Label Size” needs to be confirmed.
- Note:**  
*This is not applicable to all printers and will add / remove fields depending upon the selection made*
- 19) If a printer logo is required this can be selected in the “Pass Logo:” or “Fail Logo:” fields,
- Note:**  
*If you want to upload your Company Logo then please see Application note number 0068 “How to Upload your Company Logo onto the Apollo Series”*
- 20) Depending on the printer type, the density can be altered. However, it may be worth leaving this at the pre-set value.
- 21) Finally, save these setting by using function key “F3”. 
- 22) A virtual label image will be displayed, which may show a Company Logo depending upon previous selections, and is now ready to be printed. Alternative versions of the label can be selected using the function key “F3” 