

PATGuard 3 – Installing on a Network Server


Installing on a network Server

Once you have downloaded PATGuard 3, double-click the downloaded file to install PATGuard 3 on your system. Click **Next >** on the following screen to start the installation process.




Installation Screen 1

Review the [Licence Agreement](#) and click **Next >** to continue.

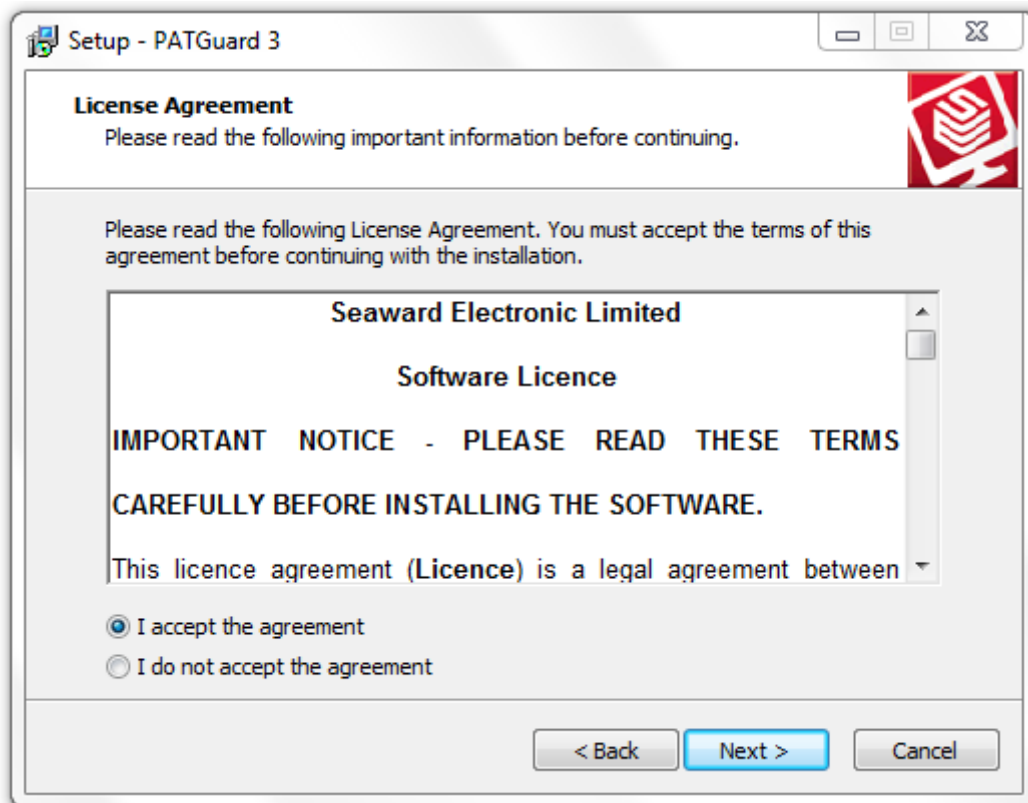


Installation Screen 2

For a network Server select **Network Install** and click **Next >** to continue.

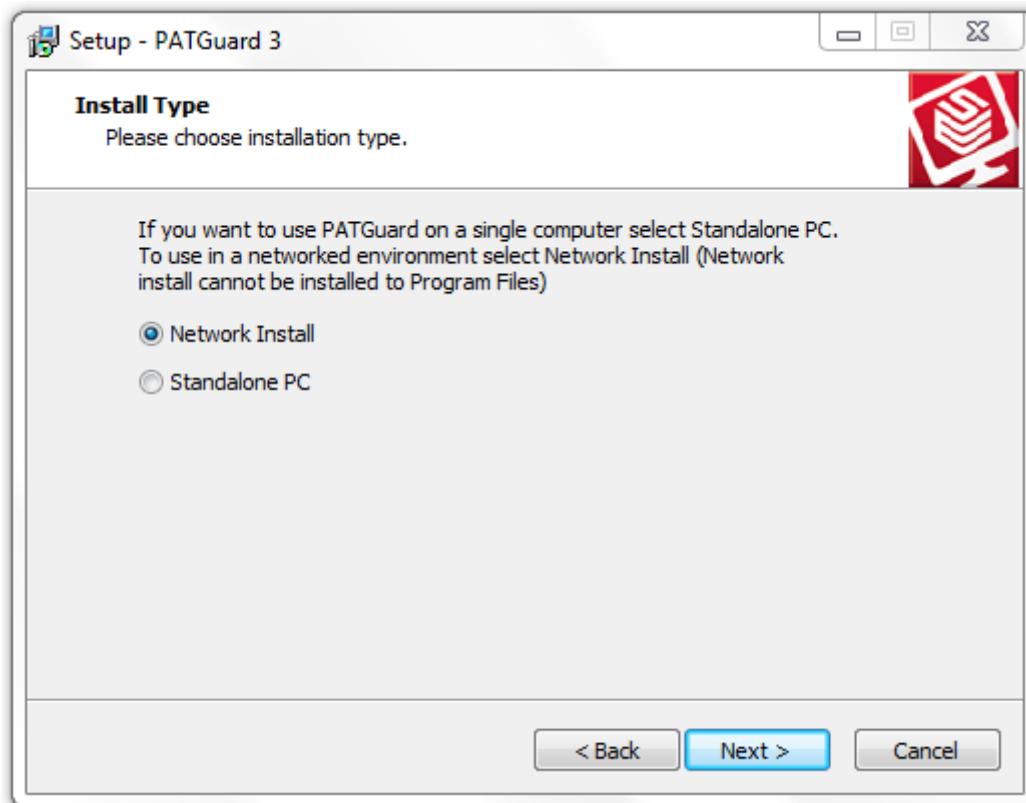

Installation Screen 3

Select an installation location that is accessible to other computers on your network. Click **Next >** to continue.

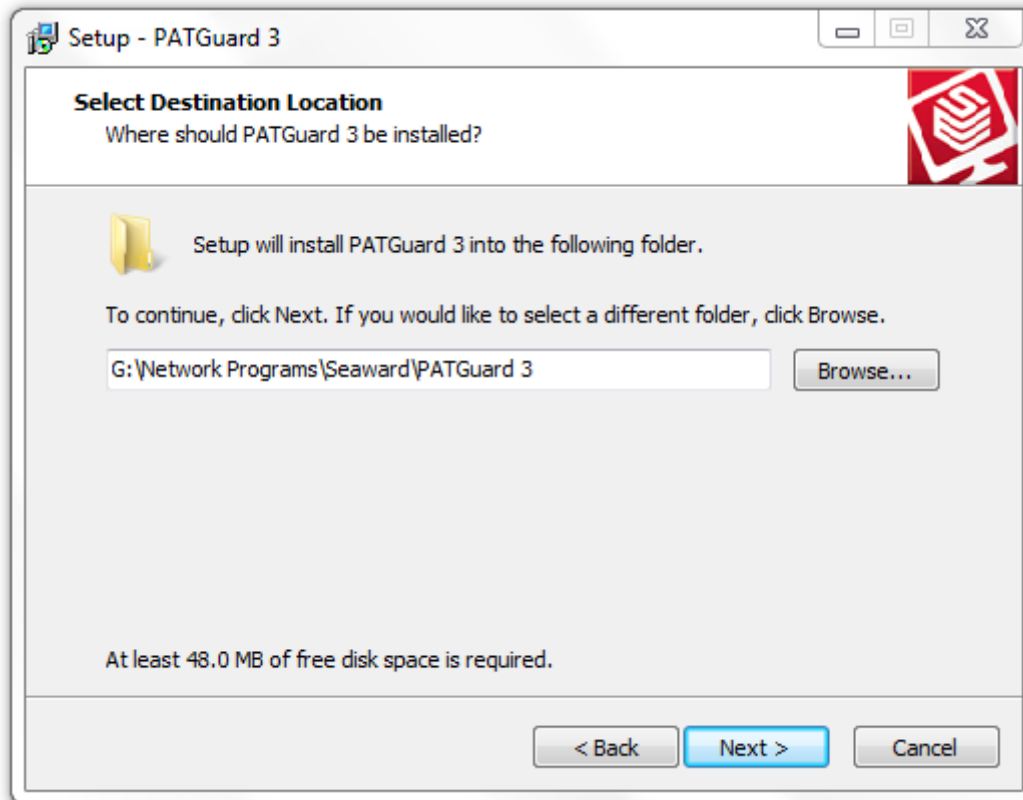

Installation Screen 4

Follow the remaining on-screen instructions to install PATGuard 3 on your network Server.

If you encounter problems installing PATGuard 3, please refer to the [Support](#) page.