

## How to Setup a Large Notes Field in the Apollo 600 and PATGuard 3

The following document is intended to be a troubleshooting guide to ensure you are setting up your Apollo 600 and PATGuard 3 in the correct manner. Please check all aspects of this before contacting the technical support helpline.


- Please register your Apollo to receive an additional 12 months warranty plus full access to Product Support. You can do this at [www.seaward.co.uk/warranty24](http://www.seaward.co.uk/warranty24) or by completing the form in the “Care and Support” card and returning by post.
- Please ensure your Apollo has the latest firmware installed, to do this please see the following link: [www.seaward.co.uk/apollo-series-firmware](http://www.seaward.co.uk/apollo-series-firmware)
- Please ensure you have the latest version of PATGuard 3 - in the software select “**Help**” and “**Check for Updates**”, note you need to be an Administrator to update PATGuard 3.

### Setting up PATGuard 3:

- 1) PATGuard 3 needs to be setup to use the text / comments lines, in “**File**” select “**Setup**”



- 2) In the “**Setup**” window, select the “**PAT Options**” tab and using the four dropdowns under “**Tester Output**” select the description in the “**Text Line :**” fields, for example;

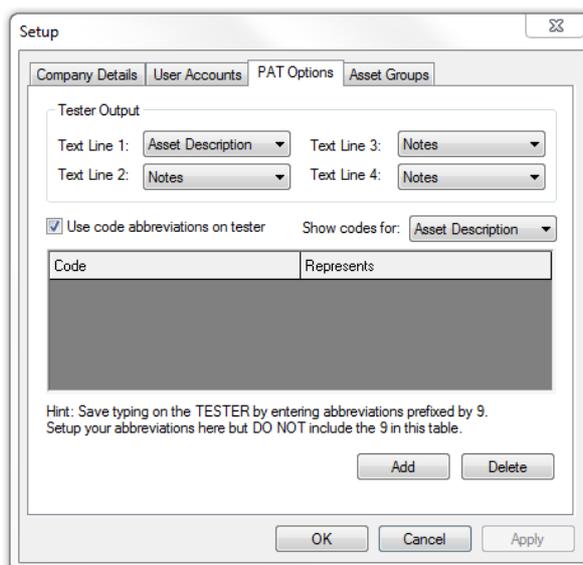


- 3) Confirm this by selecting “**OK**”.

**Note:** For help setting up the “**Code Abbreviations**” see this section in the user manual.

## Application Note 0080

## Setting up the Apollo 600:

- 1) From the Apollo 600 "Home Screen"  select "F1"  then select the tools option "F4" . Please note as a default, the Apollo will start up in the "Home Screen".
- 2) In the menu select the next page "F3"  and make sure the "Comments:" field is either "Always", "On Pass" or "On Fail".
- 3) In the "Comment Line:" field select the required field descriptions, for example;

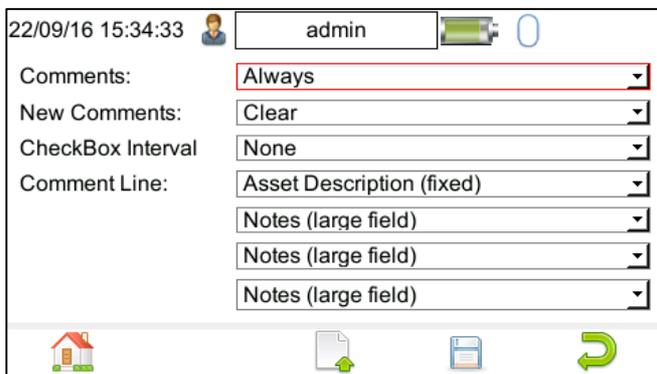

**Note 1:** The four text / comment lines on the Apollo 600 must match the four text / comment lines on PATGuard 3.

**Note 2:** The four text / comment lines on the Apollo 600 have an additional option "Asset Description (fixed)" which can be used with an uploaded **List of Configuration Data** - see separate application note for this.


**Note 3:** The four text / comment lines on the Apollo 600 also have a "Notes (large field)" this allows you to select multiple fields to consolidate entries into one large notes field. This function can be used to allow a more extensive note to be added to the asset. It is intended to be used in the last lines of the "Comment Line:" field, for example, lines 2, 3 and 4 or lines 3 and 4.

- 4) To keep these settings select the save button , "F4" 
- 5) The Apollo 600 and PATGuard 3 should now be setup to use the four text / comments lines after a test and during the download to PATGuard 3.


# Application Note 0080

## Examples of how the new Large Notes Field appears:

1) In PATGuard 3, the new large notes field can be viewed in the “Asset Details” window;

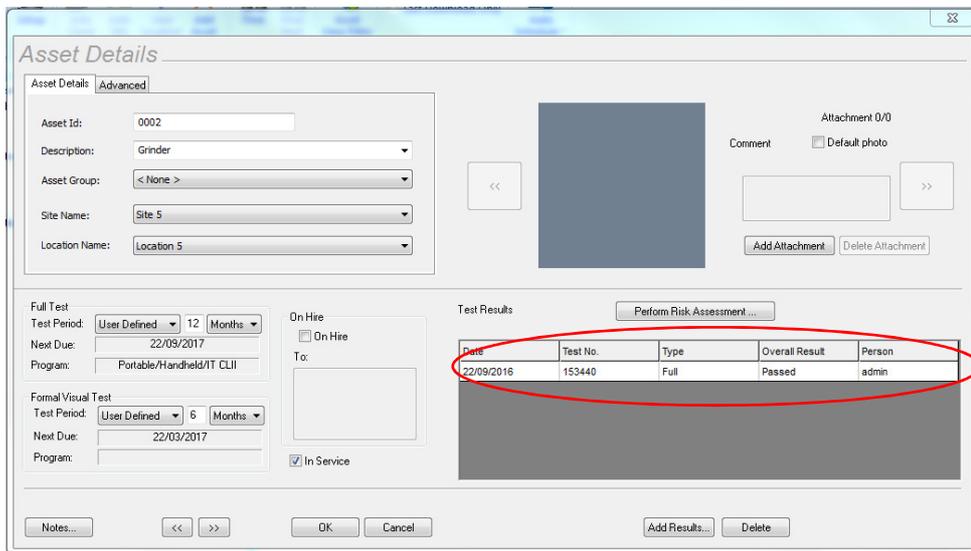

2) To view this double click on the test results to display the “Test Details”

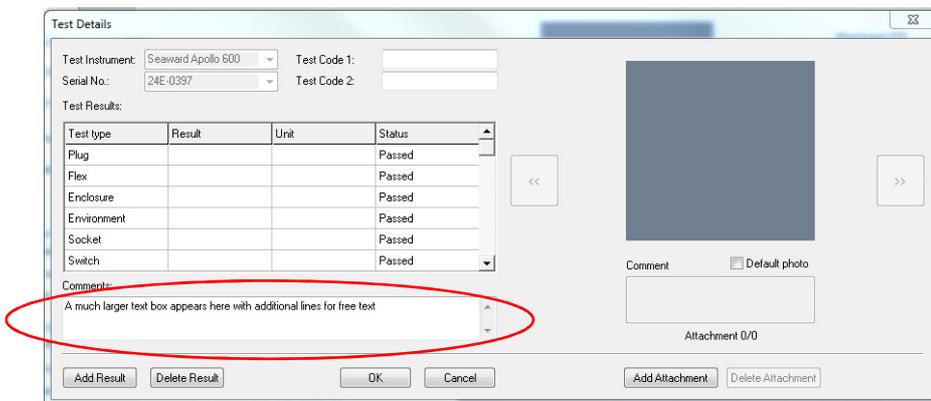

3) For an example of how the larger notes field appears after a test on the Apollo 600, please see below:

